

AMNIS STREAM

BLUETOOTH® SWIM HEADPHONES



QUICKSTART GUIDE

HI THERE!

Let's get started by registering your device at www.FINISswim.com/registration/index.ssp.
When registration is complete you will be enrolled in the warranty and replacement program.
Proof of purchase is required.

Visit www.FINISswim.com/Amnis-Stream for more information.

 
1 WHAT YOU NEED

You will need a smartwatch that fits these simple guidelines:



- ✓ Waterproof and Swimproof
- ✓ Offline audio capabilities
- ✓ Bluetooth® connectivity

2 WHAT YOU HAVE



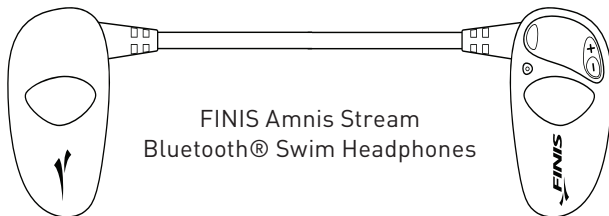


FINIS Amnis Stream
Bluetooth® Swim Headphones

USB Charger

2X Goggle Clips

   Mesh Carrying Bag

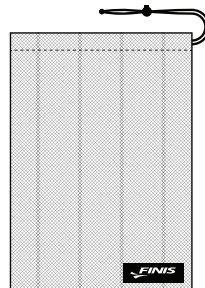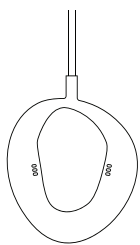

1



Apple Watch Clip
Series 3 & 4

2



Garmin Watch Clip
Fenix 5 Plus Series

3

 


Garmin Watch Clip
Vivoactive 3 Music
Forerunner 645 Music

3 GET TO KNOW YOUR BUTTONS AND LIGHTS

1. Multi-Use Button

Power On: Press and hold ➔ Verbal Cue "POWER ON"
Power Off: Press and hold ➔ Verbal Cue "POWER OFF"
Play/Pause: Single Press

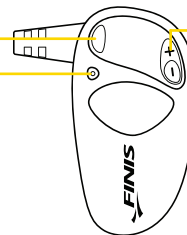

2. Volume and Track Change

Volume Up:
Single press the Top Button (+)
Volume Down:
Single press the Bottom Button (-)
Track Change:
Press and hold the Top Button (+)

 
 
 
3. LED Light

BLUE Light flashes rapidly ➔ Amnis Stream is on and trying to Bluetooth® Pair
Solid BLUE Light ➔ Amnis Stream is connected to your smartwatch
BLUE Light flashes slowly ➔ Audio is working
RED Light ➔ Low Battery

4 TIME TO CHARGE!

Charge Fully Before Your First Swim.

1. Make sure Amnis Stream is completely dry.
2. Plug in the USB Charger.
3. Remove the Goggle Clip from the Left Headphone (the one without the buttons) and slide it into the charger (logo side down).
 - *Amnis Stream's Light ➔ Solid RED = Amnis Stream is now charging ✓*
4. Amnis Stream is fully charged when: Amnis Stream's Light turns off.
 - *Battery lasts up to 5 hours, depending on the watch and Amnis Stream volume level*

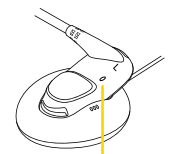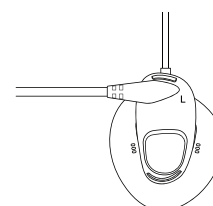

USB Charger

Left Headphone
(No buttons)

Solid RED Light

For an updated list of available clips & compatible watches, visit www.FINISswim.com/Amnis-Stream

TIME TO CHARGE! (CONT.)

Battery Level Indicators

When Amnis Stream is powered on you will receive a verbal cue of "Low Battery", "Battery Half Charged", or "Battery Charged".

Verbal cue of "Low Battery" will occur every 2 minutes when 15 minutes of playtimes remains.

5 SETTING UP YOUR SMARTWATCH

Download your preferred music or podcast app onto your smartwatch. The app must offer "offline listening" of the ability to download files.

- **Tip:** This is the same process you use for listening during "airplane mode".

Refer to the music or podcast app's guidelines on how to setup offline music on your smartwatch.

 
6 PAIRING YOUR SMARTWATCH TO AMNIS STREAM

1. Power Amnis Stream on: Verbal Cue ➔ "Ready to Pair" and the BLUE light will flash rapidly.
2. On your Smartwatch: Navigate to the Bluetooth® Settings menu.
3. Select "FINIS Stream" to connect:
Verbal Cue ➔ "Device Connected" and a solid BLUE Light will appear.

7 HOW TO WEAR


Attaching Headphones to Goggles

1. Put your goggles on.
2. Slip each Headphone under your goggle strap, be sure to match up the L (left) and R (right) indicators.
3. Headphones should be placed in front of your ears, so they are resting on your temple bones (not over your ears).
4. **Optional:** For a more secure fit, add the Goggle Clips to each headphone by matching up the logos.
 - **Tip:** If you consistently use the Goggle Clip, It's easier to attach Amnis Stream to your goggles prior to putting them on.

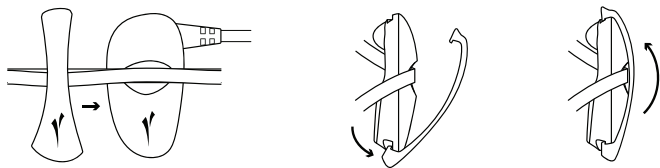

Attaching Smartwatch to Goggles

 Your smartwatch must be within 5cm of the cord in order for the Bluetooth® connection to pass through the water. The best placement for your watch is on the crown of your head (the back of your top goggle strap).

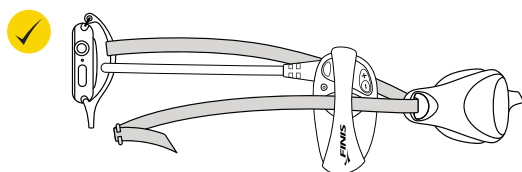

HOW TO WEAR (CONT.)

 
We included Watch Clips for some of the most popular smartwatches including:

Apple Watches


Series 3 (38mm, 42mm)
Series 4 (38mm, 42mm)

Garmin Watches


Fenix 5 Plus Series
Forerunner 645 Music
Vivoactive 3 Music

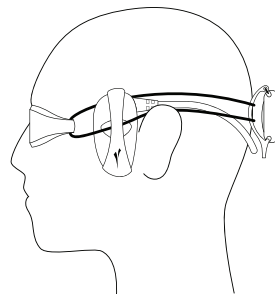

 Tip: If you don't want to use the watch clip of if you have a different watch, don't worry! Take your watch strap off and easily slip the watch beneath your swim cap.

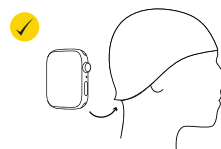

 Do not wear your smartwatch on your wrist. The Bluetooth® connection cannot travel that far through the water.



8 ENJOY THE MAGIC OF SWIMMING WITH ENTERTAINMENT

- Bliss out underwater
- Rock to your favorite playlist
- Kick into high gear with the right beats
- Drift away into a podcast or audiobook

9 CARE INSTRUCTIONS

After each use:

1. Rinse the device in cool, fresh water
2. Pat Dry
3. Store in a cool, dry environment
4. Do not leave the device in direct sunlight or a hot car as this may cause damage

Charging:

Make sure the device is completely dry before charging! Refer to the third step of the instructions for how to charge your device.

IMPORTANT:

For all technical issues, please contact us directly
- we are here to help!

www.FINISswim.com/support
USA 888.333.4647
EU +359 2 936 86 37